



# Installing plastic strips over fabric seams

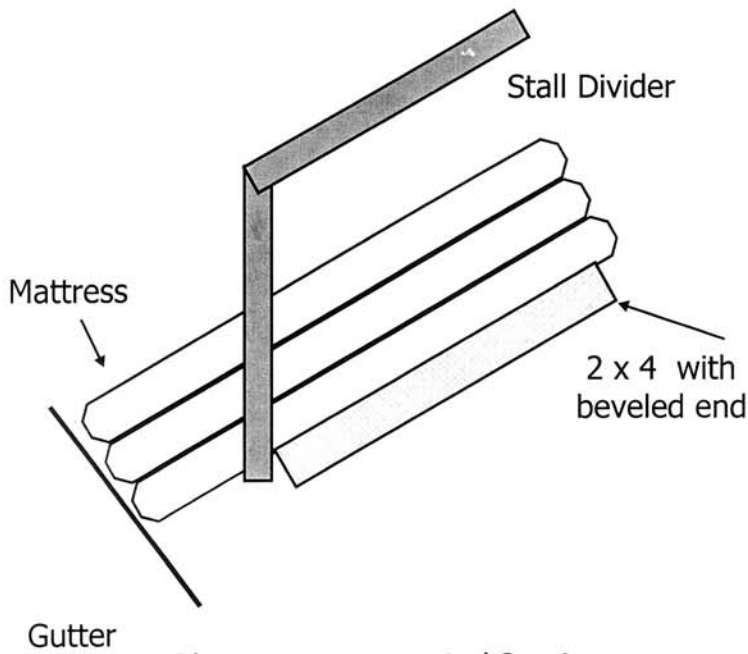


Place pressure treated 2 x 4 under stall divider between mattresses. Leave the 2 x 4 short of end of mattress at beveled end.

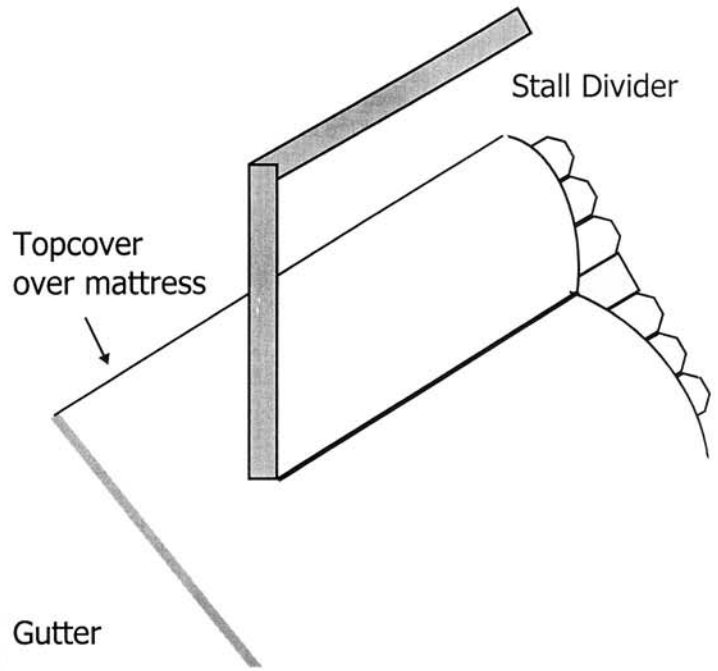


Cut fabric from manger edge to divider post so fabric will come back together over center of 2 x 4.

## End View

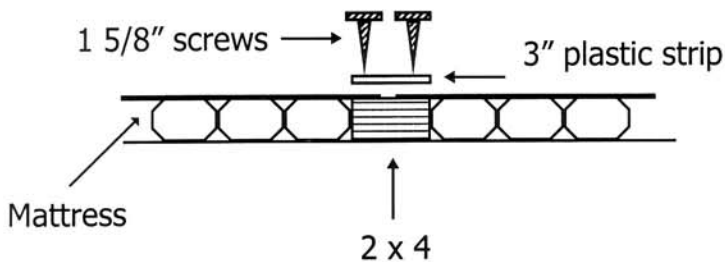

Be sure ends of fabric butt together over the 2 x 4. Attach plastic strip with 1 5/8" galvanized or stainless deck screws approximately ever 8" along each edge of strip.

## Finished Seam

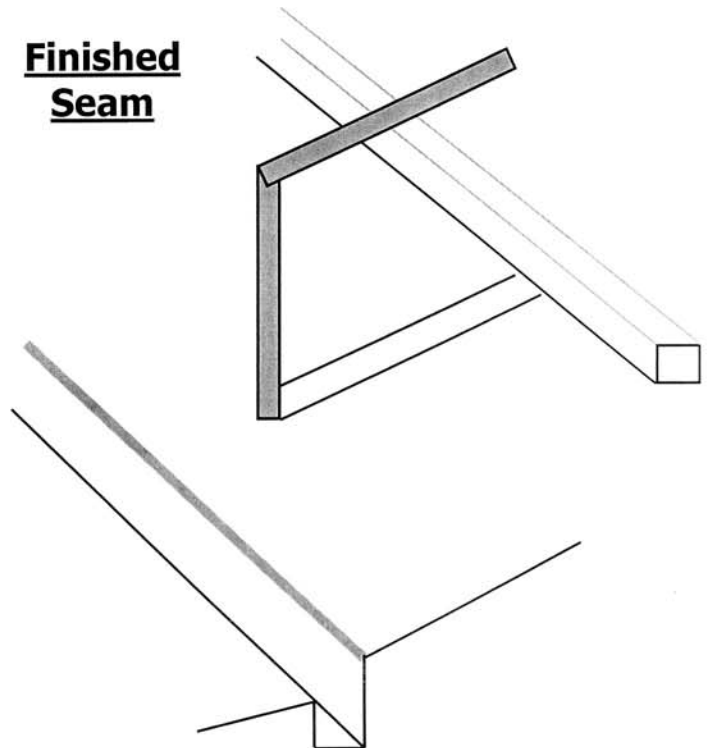

**NORTH BROOK FARMS, INC.**  
**Toll Free 877-624-2638**