


# Installation instructions for DuraBrisket

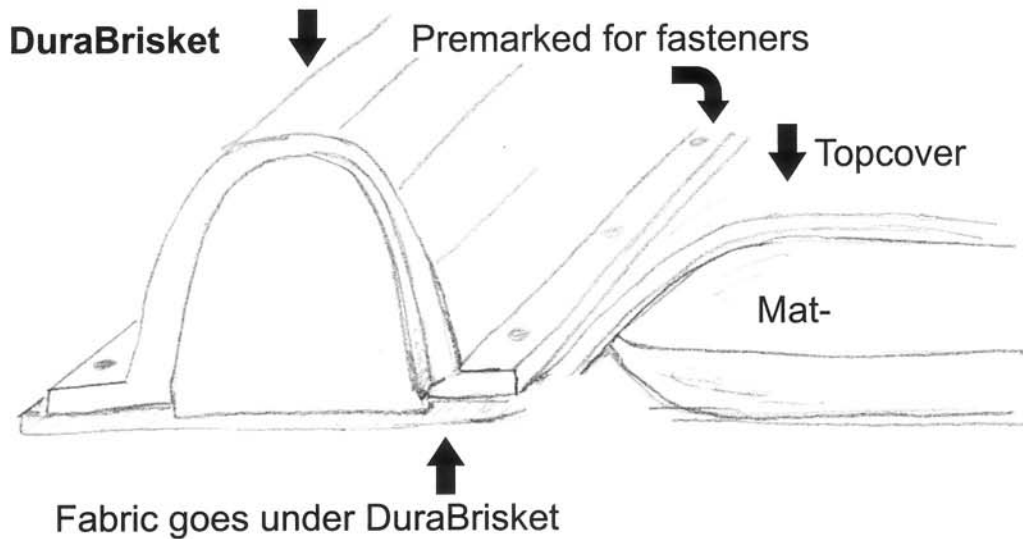

Installation of DuraBrisket replaces the plastic strip normally used to attach the fabric. Be sure you have at least 12 inches of fabric beyond the top of the mat. Place DuraBrisket on top of fabric, pull in tight to matt. Brisket is pre-marked every 8 inches. On concrete attach with 2-1/4" x 1/4" tapcons every 16 inches on both sides. If installing on wood use #10 galvanized screws every 8 inches on both sides.

## **NORTH BROOK FARMS**

Phone: 315-834-9390

Fax: 315-834-9675

[www.northbrookfarms.com](http://www.northbrookfarms.com)

2472 Hamilton Rd.

PO Box 1239

Weedsport, NY 13166