



**INSTALLATION INSTRUCTIONS FOR HDPE SHEETS**

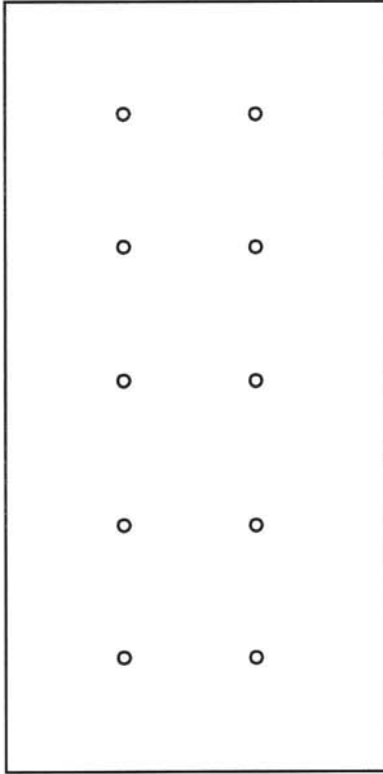

16" on center

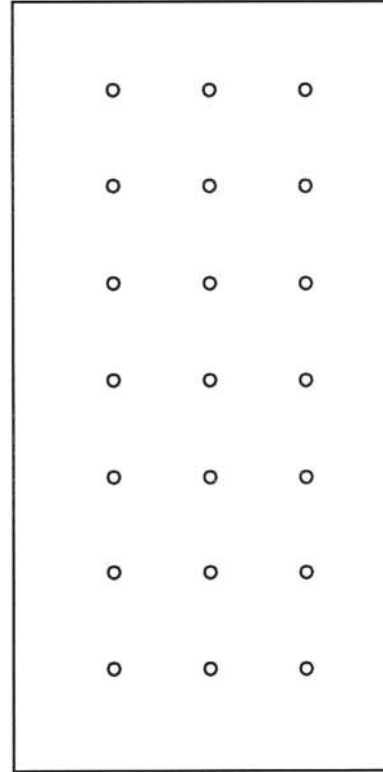

12" on center  
For rough duty areas

**INSTALLATION TIPS**

- Sheets will expand and contract with temperature changes
- Sheets should be installed at ambient room temperature
  - Leave sheets in room to be installed for 24 to 48 hours before installing
- Leave 1/8" of space for the sheet to move in the "H" joints
- Use a 9/32" drill bit for the 1/4" x 1-5/8" rivets
- Rivets must be loose enough for sheet to move
- All materials needed for installation are available from North Brook

**TOLL FREE 1-877-624-2638**

OR

**[www.northbrookfarms.com](http://www.northbrookfarms.com)**